

SEM

Problade

INSTRUCTION MANUAL

تعليمات

Blender Smoothie Set

SK-210S

230 V - 50/60 Hz

800 watt

Multi Blender Set

SK-234

230 V - 50/60 Hz

1500 watt

Multi Blender Full Set

SK-235

230 V - 50/60 Hz

1500 watt



Made in Turkey

صنع في تركيا

We thank you for having selected an SEM brand multi blender set. We wish this product to make life easier for you, as with other SEM products offered to you. In order to obtain utmost output from your appliance, please read carefully this user's manual and save it for further use

IMPORTANT SAFEGUARDS

Make sure that the voltage indicated on the SEM Multi Blender Set corresponds with the mains voltage in your home. Our company shall not be held liable for any failures owing to any discrepancy and such failures shall not be covered by the guarantee.

Your device is for household use only. It should not be used for commercial or industrial purposes. Otherwise, inconvenient uses shall not be covered by the guarantee.

Keep the appliance away from and out of the reach of children.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning;

Do not allow children to use the blender without supervision.

To prevent harming your appliance do not use extension cords that supply insufficient current.

Do not place your appliance over or near direct heat sources such as hot gas, electric burner, or heating oven.

Do not let cord hang over edge of a table or counter, or touch any other appliances.

NEVER operate your unit without putting foods inside of the bowl or on wet surfaces. Otherwise, this may result in damage to your appliance.

Do not put foods over the recommended amount; otherwise your appliance may be damaged.

Be certain that operation bowl lid is securely locked in place before operating your appliance. Do not deactivate the locking mechanism via other tools.

When carrying or washing, take care to hold the mixing and cutting blades of your appliance from the correct side, as they are very sharp. Otherwise, they

may cause serious injuries.

When operating your unit NEVER use your fingers or forks, knives, spoons, etc. in order to move foods. Use only pusher accessory for such purpose.

Avoid from touching any moving parts when in use. Do not keep your hands, hairs, clothes, or any tools closer

Do not use the appliance for breaking too stiff materials into pieces. For example, breaking ices, etc.

NEVER attach to your appliance any accessories belonging to other appliances.

Avoid actions that may harm or damage the cord or plug of your appliance. Do not carry your appliance by holding from the cord. To unplug, hold the plug and do not pull by the cord.

Do not operate the appliance with a damaged cord, plug or accessories, or after it has been dropped down or malfunctions in any manner. In such case, take it to the nearest Authorized Service for any necessary examinations and repair. The plug and cord must be replaced by the authorized service.

NEVER use any parts on your appliance, which parts not produced or recommended by the manufacturer firm, since they may result in, fire, electrical shock or injury.

Before dismantling any accessory from your appliance ensure that its engine is completely stopped.

ALWAYS unplug from outlet when not in use, or before putting in or taking out accessories, or during maintenance and cleaning.

NEVER operate your SEM Multi Blender Set in an empty bowl or outdoors. This may cause damaging to your appliance.

Do not operate your appliance for long periods; use it for shorter periods rather.

Use your appliance for its intended purposes as recommended.

Notes:

1- For your safety, your appliance will not operate until the container lid is fully placed and locked to its position.

2- Remove the engine by rotating to the right.

WARNING: Your appliance is designed to operate for up to 10 sec. Ensure not to exceed this duration when preparing foods. Otherwise your unit may be damaged. Allow your appliance to cool down for about 1 minute per every operation of 10 seconds.



		Multi Blender set	Multi Blender Full set	Smoothie Blender set
1	Motor (Main Body)	✓	✓	✓
2	Stainless steel blender rod	✓	✓	✓
3	operation bowl lid	✓	✓	
4	1,5 Lt operation bowl	✓	✓	
5	Pusher	✓	✓	
6	Grater/ slicer disc and blades	✓	✓	
7	Beater adapter and beaters	✓	✓	
8	Measuring beaker	✓	✓	
9	operation bowl lid		✓	
10	0,75 Lt operation bowl		✓	
11	Smoothie maker			✓

MIXING / CUTTING WITH THE BLENDER ROD

- Use your blender to prepare Sauce, soup, mayonnaise, baby food, etc.
- Place the motor body on the blender apparatus and lock it by turning it.
- Pour the ingredients you will mix into the mixing bowl or any other container (pot, etc.).
- Start your device by pressing the Start or Turbo button.
- After your operation is finished, turn your hand blender off and unplug it.


Note: Keep your appliance upright while mixing the ingredients in the mixing bowl.

Never keep the device tilted.



BEATING AND MIXING WITH THE BEATER

- Use the beater to whip cream, egg white and ready-made sweet mortar, etc.
- Attach the beater tips to the beater gearbox. Place the motor body on the Beater box and turn it to lock it.
- Pour the ingredients you will mix into the mixing bowl or any other container (pot, etc.). Start your device by pressing the low or high (Turbo) speed start button.

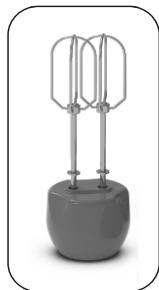

CUTTING WITH THE OPERATIONAL BOWL

- After placing the processing bowl on a flat and stable surface, place the accessory carrier disc shaft on the centering shaft in the chamber.
- Place the shredder blade on the accessory carrier shaft.
- Place the material you want to shred into the bowl of equal height and not to be stacked. Do not put more food than recommended, your device may be damaged.
- Place the transparent intermediate cover over the processing chamber. Carefully place the lockable lid and ensure that the ears are locked. The "click" sound you will hear will indicate that the ears are in place and locked.
- Place the motor part by turning it on the cover.
- Plug your device into the socket.
- You can start the shredding process by pressing the start button or turbo button on the motor body.
- The "TURBO" button provides pulsed operation and maximum power usage. With the Turbo function, you get the result you want more easily and also prolong the life of your device especially in the shredding process.



- Before processing with your device, remove the pits of peaches, apricots, plums, fruits, and nuts of almonds, hazelnuts, walnuts, etc. Use the meat without bones, lean and nerveless.

SUGGESTIONS FOR CUTTING:

Materials	Capacity Max	Recommended Speed
MEAT	400gr	Turbo
ONION/GARLIC (Divided)	500gr	On-Turbo
FRUIT (Divided)	700gr	Turbo
PARSLEY	100gr	On-Turbo
HAZELNUT/ ALMOND/WALNUT	300gr	On-Turbo
CHEESE	300gr	Turbo
BISCUIT	300gr	On-Turbo

GRATING AND SLICING WITH THE OPERATIONAL BOWL

- Place the robot bowl on a flat and stable surface. Place the rotating spindle over the centering spindle.

- There are 3 different blades for slicing and grating. Attach your grating or slicing blade onto the disc with the protruding surface on top.

- Place the slicing disc on the rotating spindle. If the grating / slicing disc lies flat and does not move when pressed from the top, it snaps into place.

- Place the transparent intermediate cover on the robot chamber. Carefully place the lockable robot chamber cover and ensure that the ears are locked. The click that you will hear indicates that the ears are in place and locked.

- Replace the blender body and press the start button. Start the grating / slicing process.

For your safety, use the pusher to push the food you will slice or grate into the robot chamber.



SUGESSTIONS FOR GRATING AND SLICING

Materials	Capacity Max	Recommended Speed
CUCUMBER	800gr	Turbo
CARROT	400gr	Turbo
POTATO	400gr	On-Turbo
PUMPKIN	800gr	On-Turbo
RADISH	400gr	Turbo

CUTTING WITH THE OPERATIONAL BOWL

- Place the chopping knife of your device securely on the shaft in the middle of the bowl.
- Place the food you want to shred in the container at an equal height and not stacked.
- Place the shredder adapter of your device on the container.
- Place the motor body of your hand blender into its socket on the adapter without turning too tight.
- You can start the process by pressing the start button on the motor body.
- When finished, clean the chopping bowl and the double-sided stainless knife with detergent water and clean the knife and keep in the chopper bowl.
- DO NOT immerse the shredder adapter in water. Wipe the outside with a wet cloth.



Nutritions	Maximum Capacity	Stage	Duration
Walnut	250 gr	2 (Turbo)	2-3 min
Parsley	50 gr	2 (Turbo)	2-3 min
Onion	250 gr - 300 gr.	2 (Turbo)	2-4 min
Fruit	200 gr - 300 gr.	1	2-3 min
Butter-Honey mix	150 gr of butter 400 gr of honey	2 (Turbo)	3 sec

SMOOTHIE MAKER

- Place the mixing bottle on an even surface with the open mouth up and open the bottle.
- Add the ingredients of the beverage you will prepare to the mixing bottle. Fill the ingredients with a space in the mouth of the bottle.
- Secure the smoothie by turning to the bottle .
- Place the blender body by turning it into the smoothie apparatus.
- Plug in the product and prepare the mixture by pressing the start button so that the bottle is upside down.
- When mixing is complete, first separate the blender body from the bottle and the apparatus.
- Place the bottle on a flat surface with the smoothie attachment on top. Remove the smoothie attachment and attach the bottle cap.



ATTENTION:

MIXING BOTTLE SHOULD NOT BE BOILED.

FOOD SHOULD NOT BE IN HIGH TEMPERATURE.

THE TEMPERATURE OF THE FOODS USED MUST BE AT MOST 60 ° C

Notes:

- Cut fruits and vegetables into equal pieces between 1.8 cm and 2.5 cm.
- Do not use your device to mix dough, mashed potatoes, meat, etc.
- Do not fill the bottle with excessive amount of material, if your device's engine stops, turn off your blender immediately, unplug your device from the electrical outlet and wait at least 10 minutes for your device to cool.

CLEANING AND CARE

- Before cleaning your device, make sure that the plug is unplugged and wait for your device to cool.
- It is very important that you wash the accessories immediately after using them in order to make your device easy to clean.
- To clean the accessories of your device; Do not use substances such as abrasive detergents, sponges, polishers and aerosol cleaners that may damage the surfaces of the device and accessories.
- Never leave your plug in the socket when you are not using your device.
- Do NOT immerse the motor (main body), lockable chamber lid and whisk adapter in water or any other liquid. Wipe the outside with a slightly damp cloth and dry thoroughly.
- Clean the stainless steel blender with warm soapy water. When washing under water, take care not to miss water in the slot where the engine is sitting. If water enters the slot, immediately wipe it upside down and let it dry with the blade up.
- You can wash the processing chamber of your device, transparent intermediate cover, pusher, double-sided stainless steel knife, grater and slicing knives and beater wires with detergent water or on the top shelf of the dishwasher.
- Be careful when washing the blades, grater and slicer blades. Because these parts are sharp, they can cause serious injury



		Multi Blender set	Multi Blender Full set	Smoothie Blender set
1	المحرك (الجسم الرئيسي)	✓	✓	✓
2	عامود الخفق في الخلاط	✓	✓	✓
3	غطاء وعاء التشغيل	✓	✓	
4	وعاء بسعة ١,٥ لتر	✓	✓	
5	دافع	✓	✓	
6	قرص حامل	✓	✓	
7	محول المضرب والمضارب	✓	✓	
8		✓	✓	
9	غطاء وعاء التشغيل		✓	
10	وعاء بسعة ٠,٧٥ لتر		✓	
11	صانع العصائر			✓

نشكركم على اختياركم مجموعة الخلاطات المتعددة. نتمنى هذا المنتج لجعل الحياة أسهل بالنسبة لك. من أجل الحصول على أقصى إخراج من جهازك ، يرجى قراءة دليل المستخدم بعناية وحفظه لاستخدامه مرة أخرى.

إجراءات حماية مهمة

تأكد من أن الجهد المشار إليه في مجموعة الخلاط المتعدد يتوافق مع جهد التيار الكهربائي في منزلك. لن تتحمل شركتنا مسؤولية أي إخفاقات بسبب أي تباين ، ولن يتم تغطية هذه الإخفاقات بالضمان.

جهازك مخصص للاستخدام المنزلي فقط. لا ينبغي أن تستخدم لأغراض تجارية أو صناعية. بخلاف ذلك ، يجب ألا يشمل الاستخدامات غير المريحة الضمان.

حافظ على الجهاز بعيداً عن متناول الأطفال.

يمكن استخدام هذا الجهاز من قبل الأطفال الذين تتراوح أعمارهم بين ٨ سنوات فما فوق والأشخاص الذين يعانون من قدرات بدنية أو حسية أو ذهنية أو نقص الخبرة والمعرفة إذا تم إعطائهم إشرافاً أو تعليمات بشأن استخدام الجهاز بطريقة آمنة وفهم المخاطر متورط. يجب ألا يلعب الأطفال مع الجهاز. يجب ألا يتم التنظيف والصيانة من قبل الأطفال دون إشراف. قم دائماً بفصل الخلاط عن وحدة التزويد إذا تركت دون مراقبة وقبل التجميع أو التفكيك أو التنظيف.

لا تسمح للأطفال باستخدام الخلاط دون إشراف.

لمنع إلحاق الأذى بجهازك ، لا تستخدم أسلاك التمديد التي توفر التيار غير الكافي.

لا تضع جهازك فوق أو بالقرب من مصادر الحرارة المباشرة مثل الغاز الساخن أو الموقد الكهربائي أو فرن التدفئة.

لا تدع السلك يعلق على حافة الطاولة أو العداد ، أو المس أي أجهزة أخرى. لا تقم أبداً بتشغيل وحدتك دون وضع الأطعمة داخل الوعاء أو على الأسطح الرطبة. خلاف ذلك ، قد يؤدي ذلك إلى تلف جهازك.

لا تضع الأطعمة على الكمية الموصى بها ؛ وإلا قد يكون الجهاز معطوباً. تأكد من قفل غطاء وعاء التشغيل في مكانه بشكل آمن قبل تشغيل جهازك. لا تقم بإلغاء تنشيط آلية القفل عبر أدوات أخرى.

عند الحمل أو الغسيل ، احرص على الاحتفاظ بشفرات الخلط والقطع لجهازك من الجانب الصحيح ، حيث تكون حادة جداً. خلاف ذلك ، فإنها قد تسبب إصابات خطيرة.

عند تشغيل وحدتك ، لا تستخدم أصابعك أو شوكاتك أو سكاكينك أو ملاعقك أو

ما شابه ، من أجل نقل الأطعمة. استخدم ملحق انتهازى فقط لهذا الغرض.
تجنب لمس أي أجزاء متحركة عند الاستخدام. لا تبقي يديك ، شعرك ،
ملابسك ، أو أي أدوات أقرب
لا تستخدم الجهاز لتقسيم المواد شديدة الصلابة إلى أجزاء. على سبيل المثال ،
كسر الجليد ، إلخ
لا تقم أبداً بإرفاق أجهزتك بأي ملحقات خاصة بالأجهزة الأخرى.
تجنب الإجراءات التي قد تلحق الضرر أو تلف السلك أو قابس الجهاز. لا
تحمل جهازك عن طريق التمسك من الحبل. لإلغاء توصيله ، امسك القابس ولا
تسحب بواسطة السلك.
لا تقم بتشغيل الجهاز باستخدام سلك أو سلك توصيل أو ملحقات تالفة أو بعد
سقوطه أو تعطله بأي طريقة. في هذه الحالة ، اصطحبه إلى أقرب خدمة
معتمدة لإجراء أي فحوصات وإصلاحات ضرورية. يجب استبدال القابس
والسلك بالخدمة المعتمدة.
لا تستخدم أبداً أي أجزاء على جهازك ، أي الأجزاء التي لم تنتجها أو أوصت
بها الشركة المصنعة ، لأنها قد تؤدي إلى نشوب حريق أو صدمة كهربائية أو
إصابة.

قبل تفكيك أي ملحق من جهازك ، تأكد من إيقاف المحرك تماماً.
افصل دائماً عن مأخذ التيار الكهربائي عندما لا تكون قيد الاستخدام ، أو قبل
وضع الملحقات أو إخراجها ، أو أثناء الصيانة والتنظيف.
لا تقم مطلقاً بتشغيل مجموعة الخلاط المتعددة في وعاء فارغ أو في الهواء
الطلق. قد يتسبب هذا في تلف جهازك.
لا تقم بتشغيل جهازك لفترات طويلة ؛ استخدامه لفترات أقصر بدلاً من ذلك.
استخدم جهازك للأغراض المقصودة كما هو موصى به.
ملاحظات:

- ١- من أجل سلامتك ، لن يعمل جهازك حتى يتم وضع غطاء الحاوية بالكامل
وإغلاقه في موضعه.
- ٢- أخرج المحرك بالتناوب إلى اليمين.

تحذير: جهازك مصمم للعمل لمدة تصل إلى ١٠ ثوانٍ. تأكد من عدم تجاوز
هذه المدة عند إعداد الأطعمة. وإلا قد يكون معطوباً وحدتك. اسمح لجهازك
بأن يبرد لمدة دقيقة واحدة تقريباً لكل عملية تستغرق ١٠ ثوانٍ.

الخلط / القطع مع الخلاط

استخدم الخلاط لتحضير الصلصة ، الحساء ، المايونيز ، أغذية الأطفال ، إلخ.

ضع هيكل المحرك على جهاز الخلاط وقفله عن طريق قلبه.
صب المكونات التي سوف تخلط في وعاء الخلط أو أي وعاء آخر (وعاء ، إلخ).


بدء جهازك عن طريق الضغط على زر البدء أو توربو.
بعد الانتهاء من العملية ، أوقف تشغيل خلاط اليد وافصله.
ملاحظة: حافظ على وضع الجهاز في وضع مستقيم أثناء مزج المكونات في وعاء الخلط.
لا تبقي الجهاز مانلاً أبداً.



الضرب والاختلاط مع الخافق

استخدم المضرب لتحقق الكريمة وبيضة البيض وقذائف الهاون الجاهزة ، إلخ.

قم بتوصيل نصائح الخافق بصندوق التروس الخافق. ضع هيكل المحرك على صندوق المضرب وأدره لقفله.
صب المكونات التي ستخلطها في وعاء الخلط أو أي وعاء آخر (وعاء ، إلخ). قم بدء تشغيل جهازك عن طريق الضغط على زر البدء ذو السرعة المنخفضة أو العالية.

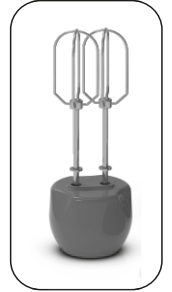

قطع مع وعاء التشغيل

بعد وضع وعاء المعالجة على سطح مستو ومستقر ، ضع عمود - قرص حامل الملحق على عمود التمرکز في الحجرة.
- ضع شفرة التقطيع على عمود ناقل الملحقات.
- ضع المادة التي تريد تمزيقها في وعاء متساوي الارتفاع وعدم تكديسه. لا تضع طعاماً أكثر من الموصى به ، فقد يكون جهازك تالفاً.

- ضع الغطاء الوسيط الشفاف فوق غرفة المعالجة. ضع غطاء القفل بحذر وتأكد من قفل الأذنين. سيشير صوت "النقر" الذي ستسمعه إلى أن الأذنين في مكانهما وقفلهما.
- ضع الجزء الحركي عن طريق قلبه على الغطاء.
- قم بتوصيل جهازك في المقبس.
- يمكنك بدء عملية التمزيق بالضغط على زر البدء أو زر التوربو على جسم المحرك.

يوفر زر توربو عملية نابض وأقصى استهلاك الطاقة. مع وظيفة - توربو ، وتحصل على النتيجة التي تريدها بسهولة أكبر ، وكذلك إطالة عمر الجهاز وخاصة في عملية التمزيق.



قبل المعالجة باستخدام جهازك ، أزل حفر الخوخ والمشمش والوخ والفواكه وجوز اللوز والبندق والجوز ، وما إلى ذلك. استخدم اللحم بدون عظام ، هزيل وعصبي.

صريف وتقطيع مع وعاء التشغيلي

ضع وعاء الروبوت على سطح مستو وثابت. ضع محور الدوران على محور الدوران. هناك ٣ ريش مختلفة للتقطيع والشبك. قم بتوصيل الشفرة المقطعة أو المقطعة على القرص مع وجود سطح بارز في الأعلى. ضع قرص التقطيع على محور الدوران. إذا كان قرص التشریح / التقطيع مسطحًا ولا يتحرك عند الضغط عليه من الأعلى ، فإنه يستقر في مكانه. ضع الغطاء الوسيط الشفاف على حجرة الروبوت. ضع بعناية غطاء غرفة الروبوت القابل للقفل وتأكد من قفل الأذنين. تشير النقر الذي ستسمعه إلى أن الأذنين في مكانهما وقفلهما. ضع جسم الخلاط واضغط على زر البدء. بدء عملية صريف / تشریح. حفاظا على سلامتك ، استخدم انتهازی لدفع الطعام الذي سوف شريحة أو صر في غرفة الروبوت.



قطع مع وعاء التشغيل

ضع سكين التقطيع الخاص بجهازك بشكل آمن على العمود في منتصف الوعاء. ضع الطعام الذي تريد تمزيقه في الحاوية على قدم المساواة وليس مكدة. ضع محول التقطيع لجهازك على الحاوية. ضع الهيكل الحركي لخلاط اليد في المقبس على المحول دون التضيق. يمكنك بدء العملية عن طريق الضغط على زر البداية على جسم المحرك. عند الانتهاء ، قم بتنظيف وعاء التقطيع والسكين المقاوم للصدأ على الوجهين بماء التنظيف وتنظيف السكين واحتفظ به في وعاء المروحية. لا تغمر محول التقطيع في الماء. امسح الخارج بقطعة قماش مبللة



نعومة صانع

ضع زجاجة الخلط على سطح متساوٍ مع فتح الفم لأعلى وافتح الزجاجة.

أضف مكونات المشروبات التي ستقوم بإعدادها لزجاجة الخلط. املاً المكونات بمسافة في فم الزجاجة.

تأمين الجهاز عن طريق اللجوء إلى الزجاجة.

ضع جسم الخلاط عن طريق تحويله إلى جهاز عصير.

قم بتوصيل المنتج وتحضير الخليط عن طريق الضغط على زر

البداية بحيث تكون الزجاجة مقلوبة رأساً على عقب.

عند اكتمال الخلط ، قم أولاً بفصل جسم الخلاط عن الزجاجة والجهاز.

ضع الزجاجة على سطح مستو مع ملحق العصير في الأعلى. انزع

مرفق العصير وأرفق غطاء الزجاجة.



انتباه:

خلط زجاجة لا يجوز غليها.

يجب ألا يكون الطعام في درجة حرارة عالية.

يجب أن تكون درجة حرارة الأطعمة المستخدمة عند ٦٠ درجة مئوية ملاحظات:

- قطع الفواكه والخضروات إلى قطع متساوية بين ١,٨ سم و ٢,٥ سم.
- لا تستخدم جهازك لخلط العجين والبطاطا المهروسة واللحوم وغيرها.
- لا تملأ الزجاجة بكمية زائدة من المواد ، إذا توقف محرك جهازك ، فقم بإيقاف تشغيل الخلاط فوراً ، ثم افصل جهازك عن مأخذ التيار الكهربائي وانتظر ١٠ دقائق على الأقل حتى يبرد جهازك.
- التنظيف والرعاية
- قبل تنظيف جهازك ، تأكد من أن القابض غير موصول وانتظر حتى يبرد جهازك.
- من المهم جداً غسل الملحقات مباشرة بعد استخدامها من أجل تسهيل تنظيف جهازك.
- لتنظيف الملحقات من جهازك. لا تستخدم مواد مثل المنظفات الكاشطة ، والإسفنجة ، والصقل ، وعمال نظافة الأيروسول التي قد تلحق الضرر بأسطح الجهاز والملحقات.
- لا تترك قابسك في المقبس عندما لا تستخدم جهازك.
- لا تغمر المحرك (الجسم الرئيسي) ، وغطاء الغرفة القابل للقفول ومحول الخفق في الماء أو أي سائل آخر. امسح السطح الخارجي بقطعة قماش مبللة قليلاً وجففها جيداً.
- قم بتنظيف خلاط الفولاذ المقاوم للصدأ بالماء الدافئ والصابون. عند الغسيل تحت الماء ، احرص على عدم تفويت الماء في الفتحة التي يجلس فيها المحرك.
- إذا دخلت المياه إلى الفتحة ، امسحها رأساً على عقب واتركها حتى تجف مع رفع الشفرة لأعلى.
- يمكنك غسل غرفة المعالجة في جهازك ، والغطاء الوسيط الشفاف ، انتهازي ، وسكين الفولاذ المقاوم للصدأ على الوجهين ، وسكاكين المباشرة وتشريح والأسلاك الخافقة مع الماء المنظف أو على الرف العلوي من غسالة الصحون.
- كن حذراً عند غسل الشفرات والمباشرة وشفرات القطاعة. لأن هذه الأجزاء حادة ، فإنها يمكن أن تسبب إصابات خطيرة

SMOOTHIE BLENDER SET

VOLTAGE : AC 230 V 50-60 HZ

PUISSANCE : 800 WATT

CLASSE DE PROTECTION : Class II

Exportateur : Sem isi A.Ş.

Importe par : ELECTRO ViF

ICE : 000083210000044

MADE IN TURKEY

SK210S



000083210000044

BLENDER MULTISSET

VOLTAGE : AC 230 V 50-60 HZ

PUISSANCE : 1500 WATT

CLASSE DE PROTECTION : Class II

Exportateur : Sem isi A.Ş.

Importe par : ELECTRO ViF

ICE : 000083210000044

MADE IN TURKEY

SK234



000083210000044

FULL MULTISSET

VOLTAGE : AC 230 V 50-60 HZ

PUISSANCE : 1500 WATT

CLASSE DE PROTECTION : Class II

Exportateur : Sem isi A.Ş.

Importe par : ELECTRO ViF

ICE : 000083210000044

MADE IN TURKEY

SK235



000083210000044

IMPORTER:electro vif

Azhari 1 rue 64 no 30 et 32 oualfa/ casablanca

ICE:000083210000044

MANUFACTURER / EXPORTER:

SEM ISI PLASTIK GIDA TRZM DAY TUK ITH IHR SAN
TIC A.S.

ORG SAN BOL 41.CAD NO:20 KAYSERİ TURKEY

TEL:+90 352 3223491